


User manual

ALFA 1-IRS and

ALFANET 1-IRS

Rail mounting airflow detector.

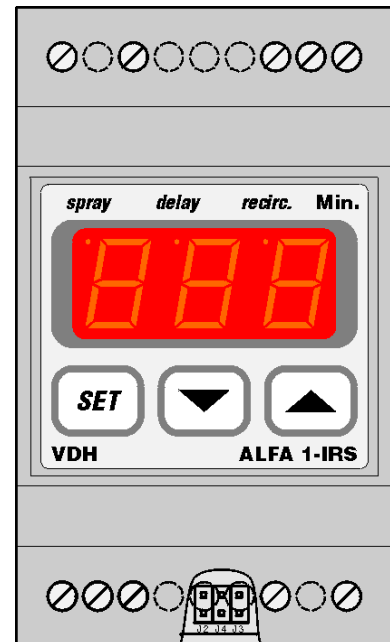

VDH doc: 071727

Version: v1.1

Date: 11-12-2007

Software: 060721_ALFA 1-IRS

File: Do071727.wpd

Range: 0/99 min.

* Installation.

On the topside of the **ALFA(NET) 1-IRS** is shown how the input, power supply and relay have to be connected.

* Function.

After connecting the **ALFA(NET) 1-IRS** to the power supply, the led 'recirc' will light-up (= recirculation position), unless the airflow detector detects an airflow.

As soon as an airflow is detected, the relay will be energized (P02=0) and the led 'spray' in the display (=spray position) will light-up. With parameter P02 it is possible to reverse the relay function.

If the airflow stops the delay-timer will start, the led 'delay' lights-up and the remaining delay time is shown on the display. After the delay time has passed, the relay will be de-energized and the led 'recirc.' lights-up. The controller is ready for the next spray cycle.

* Manual mode.

The **ALFA(NET) 1-IRS** has also a manual mode. By pushing the **UP** and **DOWN** keys simultaneous (**UP** key first and then the **DOWN** key) the spray detector comes into the manual mode. The display shows "hnd" and the relay is energized. By pushing **UP** + **DOWN** again, the manual mode will switch off.

* Controlling.

The **ALFA(NET) 1-IRS** airflow detector can be controlled by three push buttons on the front.

These buttons are:

- | | |
|-------------|--------------------------------|
| SET | - view / change the set point. |
| UP | - raise the value. |
| DOWN | - lower the value. |



* **Viewing the adjusted delay time.**

By pushing the **SET** key the adjusted delay time is shown. Also the led 'delay' starts flashing. A few seconds after releasing the **SET** key, the delay time disappears and the position from the controller is visible again.

* **Changing the delay time.**

Push the **SET** key and the delay time appears in the display. Release the **SET** key.

Now push the **SET** key again and together with the **UP** or **DOWN** keys the delay time can be changed. A few seconds after releasing the keys position from the controller is visible again

* **Setting internal parameters.**

By pushing the **DOWN** key more than 10 seconds, you enter the 'internal programming menu'. In the left display the upper and lower segment are blinking.

Over the **UP** and **DOWN** keys the required parameter can be selected (see table for the parameters).

If the required parameter is selected, the value can be read-out by pushing the **SET** key. Pushing the **UP** or **DOWN** keys together with the **SET** key allows you to change the value of this parameter.

If after 20 seconds no key is pushed, the **ALFA(NET) 1-IRS** changes to it's normal operation mode.

* **Parameter tabel.**

Para- meter	Description parameter	Range	Standard value
01	Selection unit of time Min./Sec. 0 = Minuts, 1 = Seconds	0..1	0
02	Working air flow detector 0 = Normal, 1 = Reverse	0..1	0
90	Network number (only at ALFANET)	1..250	1
95	Software version	0..255	-
96	Production year	00..99	-
97	Production week	1..52	-
98	Serial number (x1000)	0..255	-
99	Serial number (units)	0..999	-



* **Error messages.**

In the display of the **ALFA 1-IRS** the following error messages can appear:

- EE** - Settings are lost.
Solution: - Reprogram the settings.

* **Technical details.**

ALFA 1-IRS Airflow detector

Mounting	:	DIN Rail mounting
Dimensions	:	90 x 53 x 58mm (hwd)
Panel hole	:	46 x 53mm (wb)


Common:

Supply	:	230 Vac / 1,2VA 50/60Hz (Or else, see product sticker)
Relay	:	SPDT 250V/16A(C-NO), 8A(C-NC) (cos phi=1)
Control	:	through push buttons on the front.
Front	:	Polycarbonate
Range delay time	:	0/+99 minuts(or seconds)
Sensor	:	IRS-sensor (approach switch)
Communication (Option)	:	RS485 Network (A,B,Gnd: 2x twisted pair shielded min. 0,5mm ²)


- Provided with memory protection during power failure.
- Connection with screw terminals on top and bottom side.
- Special version on request available.




* Dimensions.

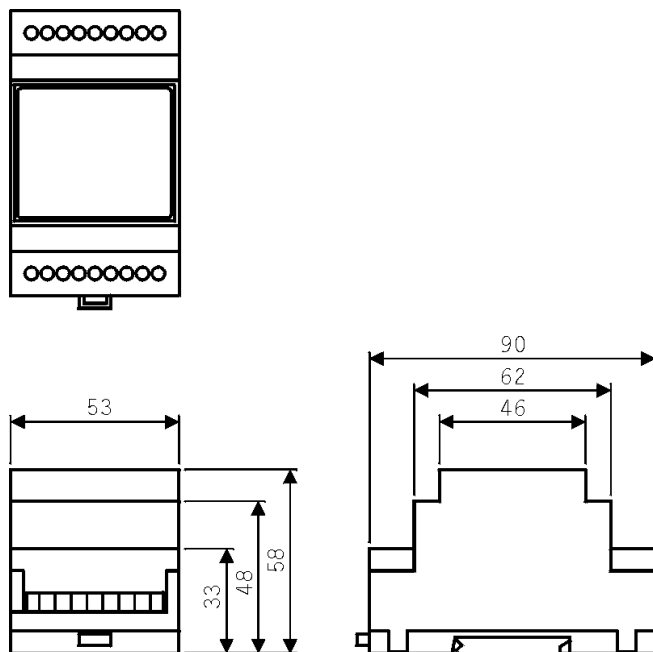

* Connections.

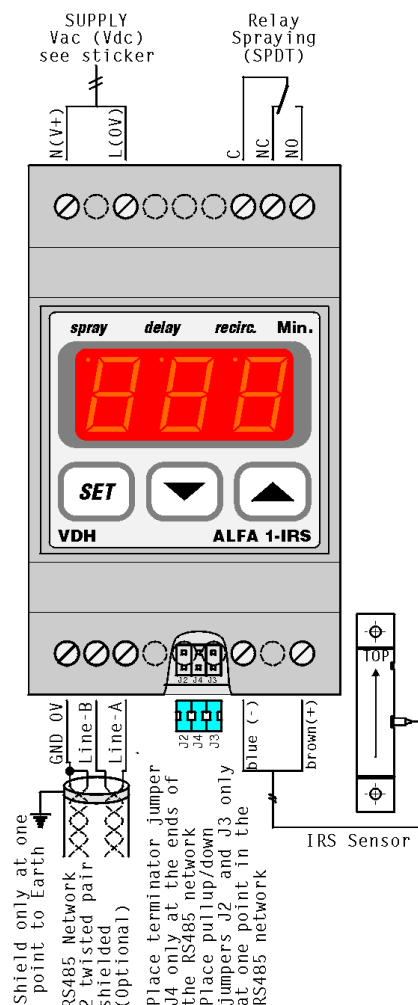

RS 485 NETWORK CONNECTIONS 2-twisted pair shielded cable:

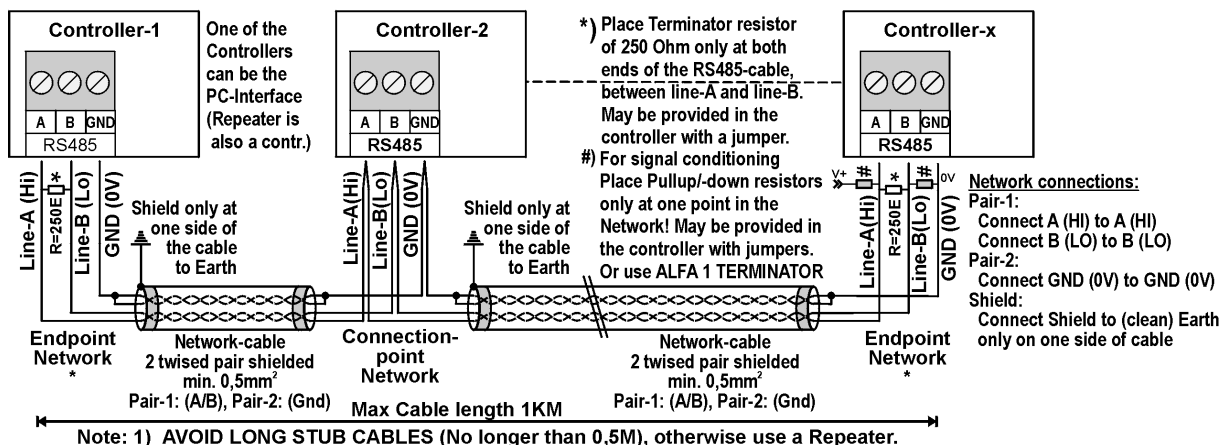

* Address.

VDH Products BV
Produktieweg 1
9301 ZS Roden
Netherlands

Tel:
Fax:
Email:
Internet:

+31 (0)50 - 30 28 900
+31 (0)50 - 30 28 980
info@vdhproducts.nl
www.vdhproducts.nl

